




GLOBAL EXPERT IN GREEN ENERGY & CLEAN WATER SOLUTIONS

+86 57128289672 www.hxgroup.com marketing@hxgroup.com

1418-35 Moganshan Road, Shangcheng Industrial Zone, 310011, Hangzhou City, China



Dual Power Comprehensive Catalog

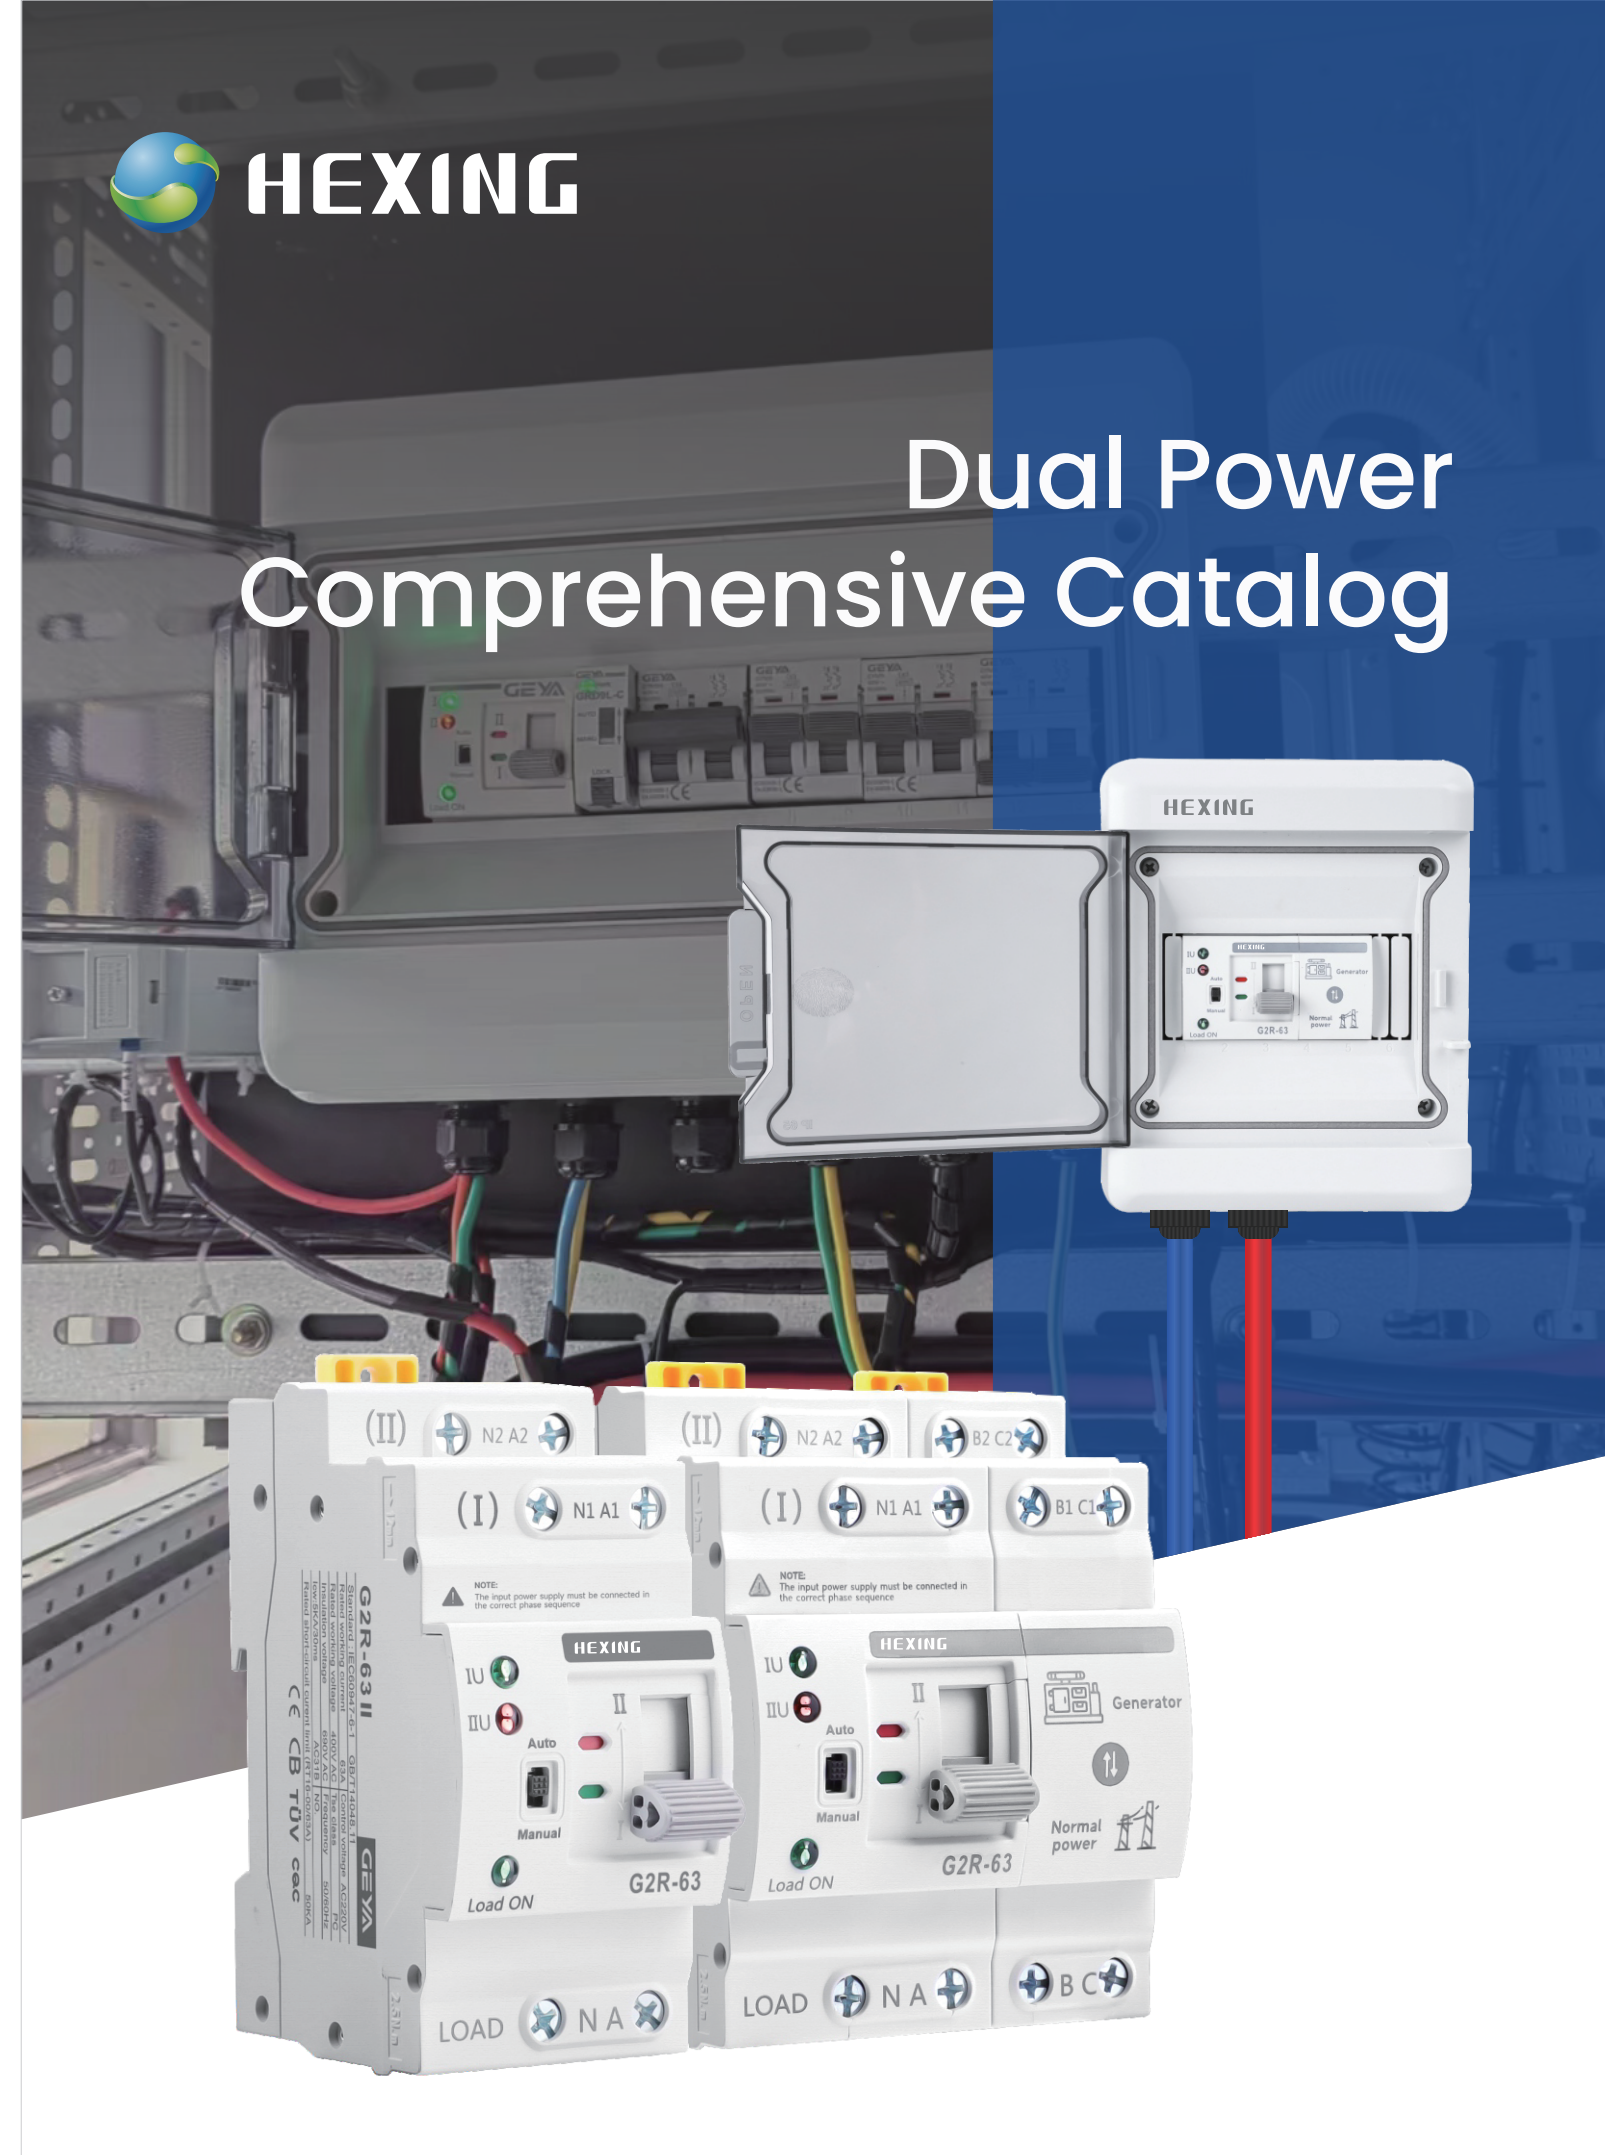

Excitation type double pressure spring

Excitation type double pressure spring patented structure to improve the ability of breaking capacity

Single pole double throw racket type

Using single-pole double-throw patting contact structure, the switch is faster

Conversion time < 20ms

Coil excitation drive, conversion time < 1s
Contact conversion time < 20ms

Dual mounting system

Rail/screw mounting
Dual mounting system

Individual arc extinguishing chamber

Equipped with independent arc extinguishing chamber, effective and rapid arc extinguishing



Dual power automatic transfer switch

The miniaturization of distribution equipment means that the increase in installation density inside the distribution cabinet and the effective optimization of the number of cabinets can effectively reduce building costs. The G2R series intelligent automatic transfer switch adopts extreme volume optimization design and still has excellent electrical and mechanical performance, which can be installed inside traditional PZ30 cabinets.



Dual power switch

International leader Small and extraordinary



G2R Automatic transfer switch

G2R-63 automatic transfer switch is a PC class infrequent change-over switch, with two-station design (commonly used for A and standby for B), suitable for AC systems with AC 50-60Hz and rated current 6A-63A. The main function of the automatic transfer switch is when the main power (common power supply A) fails, the ATS will automatically switch to the backup power (Backup power supply B) to continue working, which can effectively solve the troubles caused by power outages.

Working Conditions

Environment is $-5^{\circ}\text{C}\sim+40^{\circ}\text{C}$, and the average temperatureThe temperature range of the operating environment within 24 hours shall be lower than $+35^{\circ}\text{C}$, and the $-25^{\circ}\text{C}\sim+55^{\circ}\text{C}$, which can be reached $+70^{\circ}\text{C}$ in a short time (within 24 hours)temperature range of the storage environmentThe altitude of the installation site should be lower than 2000m.shall not exceed 50% when the ambient air temperature is $+40^{\circ}\text{C}$.Higher relative humidity is possible atThe relative temperature at the installation site $+20^{\circ}\text{C}$ the monthly average maximum relative lower temperatures.For example: when the average minimum temperature of the wettest month humidity of that month can reach 90%.Appropriate measures should be taken to prevent condensation due to temperature changes.Pollution level 3 (conductive pollution, or dry non-condensation).ATS can be installed vertically or non-conductive pollution becomes conductive due to horizontally in the cabinet, if there are special installation requirements, contact us.The protection grade of ATS case is IP30.Overvoltage categoryMain circuit category III; control and auxiliary circuit category II.

Technical Specification

	63								
Rated operating current Ie(A)	06A	10A	16A	20A	25A	32A	40A	50A	63A
Rated insulation voltage UI	690V								
Rated impulse withstand voltage Uimp	8kV								
Rated operating voltage Ue	AC220V/AC110V								
Rated frequency	50/60Hz								
Class	PC class: can be switched on and loaded without generating short-circuit current								
Pole number	2P				4P				
Rated short-circuit current Iq	5kA								
Short circuit protection device (fuse)	RT16-00-63A								
Rated impulse withstand voltage	8kV								
Control circuit	Rated control voltageUs:AC220V/110V,50/60Hz Normal working conditions:85%Us-110%Us You must use an inverter with a power output of at least 3000W (please use a sine wave Severe electromagnetic interference may cause the product to malfunction.)								
Auxiliary circuit	AC220V/110V 50/60Hz Ie=5A								
Overvoltage/undervoltage protection range	220V/50Hz Undervoltage value: 175V (±5V) Recovery value: 190V (±5V). Overvoltage value: 270V (±5V) Recovery value: 250V (±5V) 110V/50Hz Undervoltage value: 85V (±5V) Recovery value: 90V (±5V). Overvoltage value: 140V (±5V) Recovery value: 135 (±5V)								
Mechanical life	≥8000 times								
Electrical life	≥1500 times								
Usage category	AC-31B								

Notes

The input power supply must be connected in the correct phase sequence

ATS can share N lines but cannot use a ip circuit breaker to independently control N lines and L lines. To switch the power supply, you need to operate N lines and L lines at the same time. Otherwise, product faults may occur. Manual automatic operation can ensure the opening and closing performance of electrical operation, but in manual operation, there is no guarantee due to the different opening/closing speeds of the operators. In manual operation, there's possible for excessive silver alloy loss. Therefore, the selector switch should only be pulled to the manual position after all power has been cut off for inspection and maintenance of the operating system and contact information.

Normally, pull the selector switch to the electric position. When manual operation is required, pull the selector switch to the manual position. After manual operation is complete, pull the selector switch from the manual position to the automatic position.

The dual power supply belongs to the emergency switching switch, and the switching speed and frequency should not be too high.

If testing is required, the switching time should not be less than a frequency of once every minute.

The dual power switch is equipped with a interlocking mechanism, and it is strictly prohibited for non professionals to manually switch the switch when powered on. Incorrect operation can cause contact loss and reduce service life.

Installation

The installation and debugging of ATS should be carried out by professionals and personnel familiar with the switchgear, and corresponding protection during the work. The wiring method of the main circuit of the switch must ensure that the leads are not and preventive measures must be considered subjected to any pressure or strong force. Before installation and debugging, the switch should be checked for any damage or other harmful transportation should be checked to remove dirt, especially on environmental effects. At the same time, an loose wire heads that may be caused during the surface of insulation parts. These dirt may be caused by passing through packaging materials during transportation or during storage. When one of the two power sources is consistent. When connecting the primary circuit, attention should be paid to ensuring that the phase sequence of the secondary circuit, strict adherence to the wiring diagram listed in this manual should be followed, and attention should be paid to controlling the speed of switch switching, the voltage level of the power supply; The switch must be installed with good grounding. The debugging handle is only for trial use. Users should not use the debugging handle to operate under load. When debugging, the switch should be operated with a handle first. If there are no abnormalities, the manual button should be used for official operation can be carried out.


Maintenance

Maintenance and inspection should be carried out by professionals



In order to ensure the good performance of the ATS, the first maintenance and inspection should be carried out within 6 months after use. Then do the maintenance and inspection at least once a year. In harsh installation conditions, the frequency of maintenance and inspection should be increased.

If the maintenance and inspection items fail, please remove the dust. b: Please check whether the electrical contact parts are deformed and damaged and clean the surface. c: metal particles and burnt around it. Rust, acidification and dust on the contact surfaces can cause poor contact so do some manual work and measure the necessary contact resistance, d: if the ATS is wet or if unused for a long time, please dry it before turning on the power. After removing the dust, use a 500V megohmmeter to measure the insulation resistance of the normal power supply and the AC power supply. The load side and two poles, including the insulation resistance, when using live parts and metal plates, the insulation resistance should not be less than 10MQ.


Wiring instructions

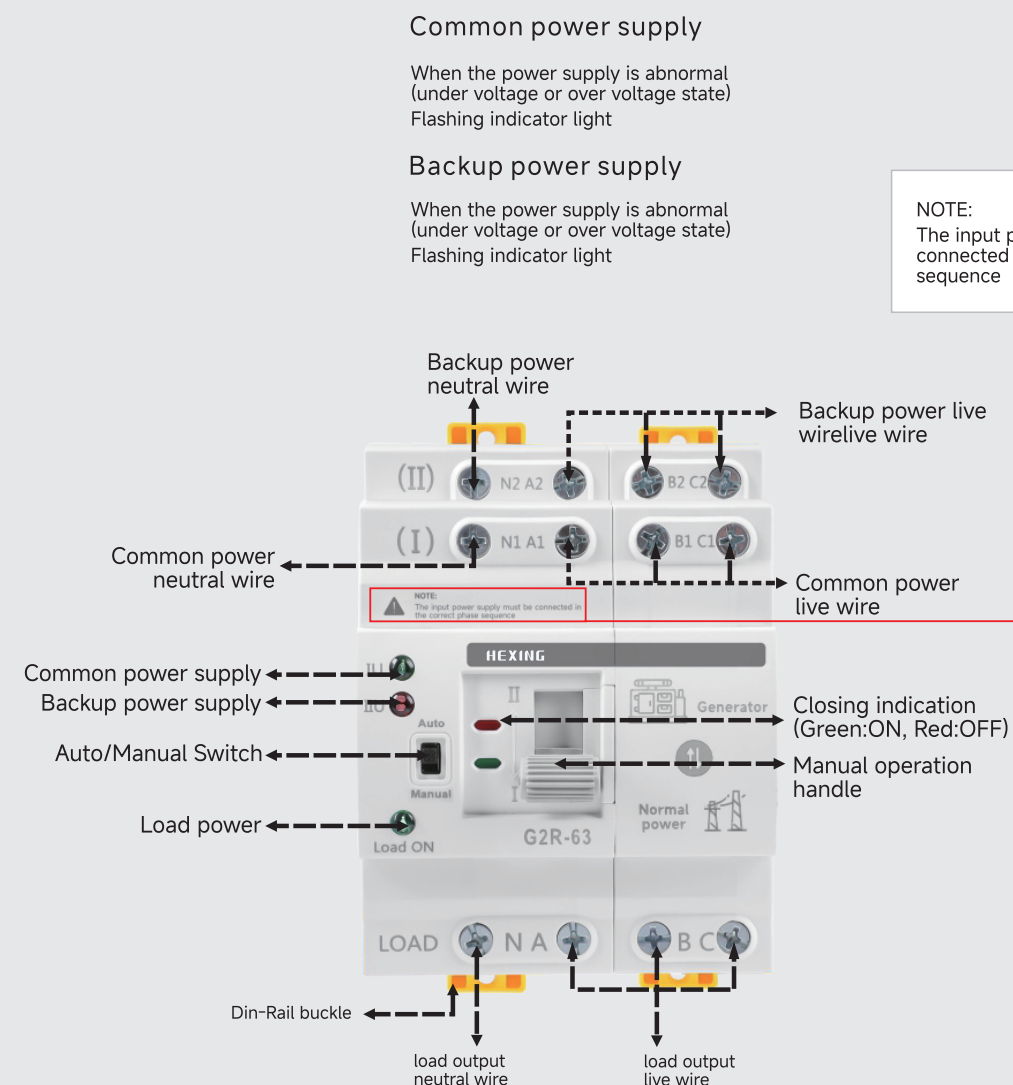


Size

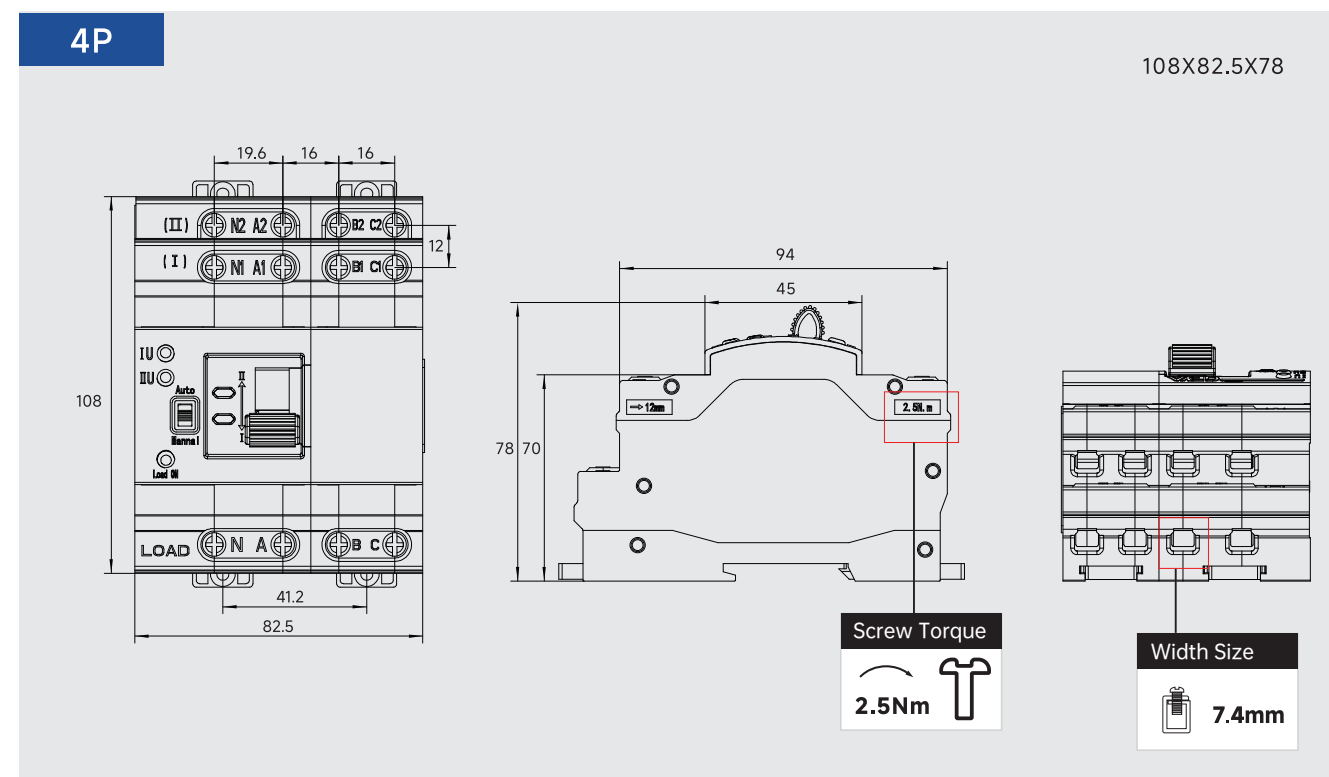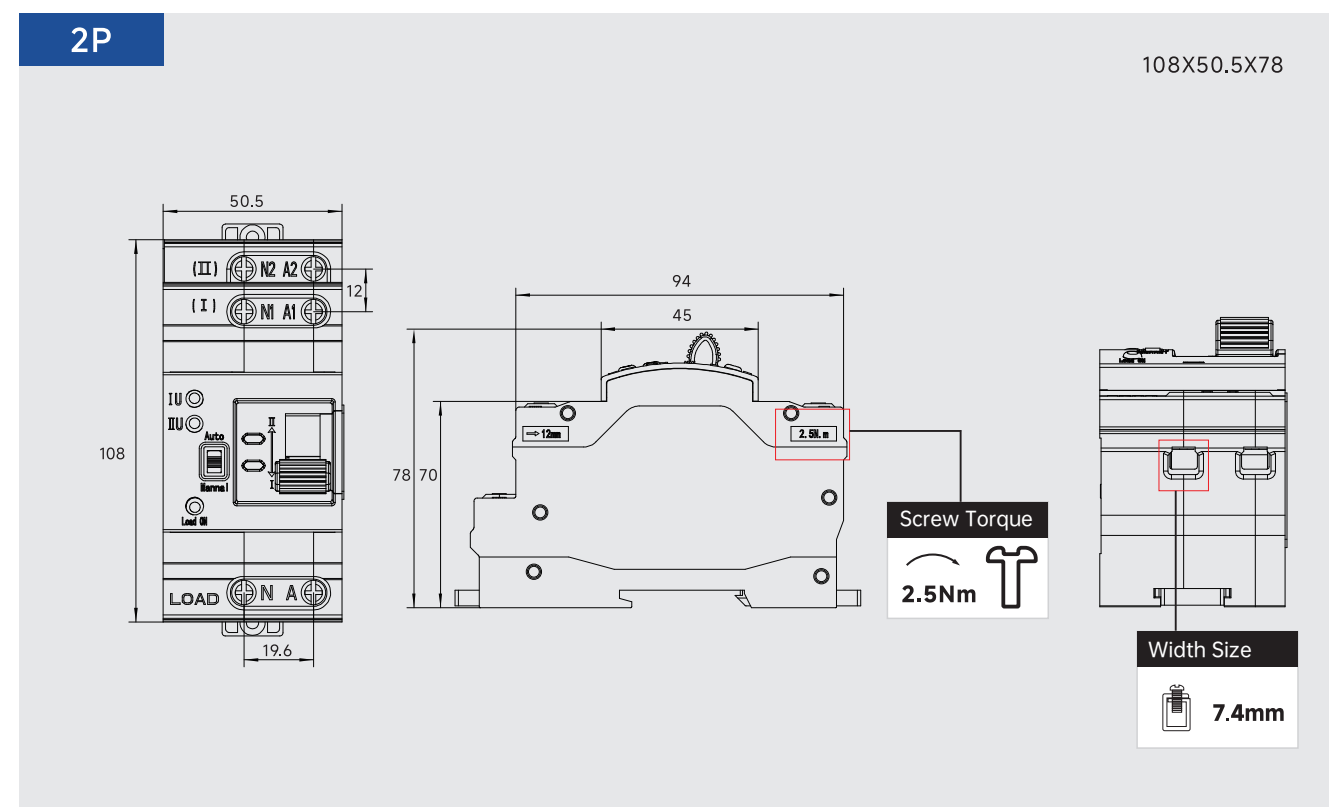

schematic diagram

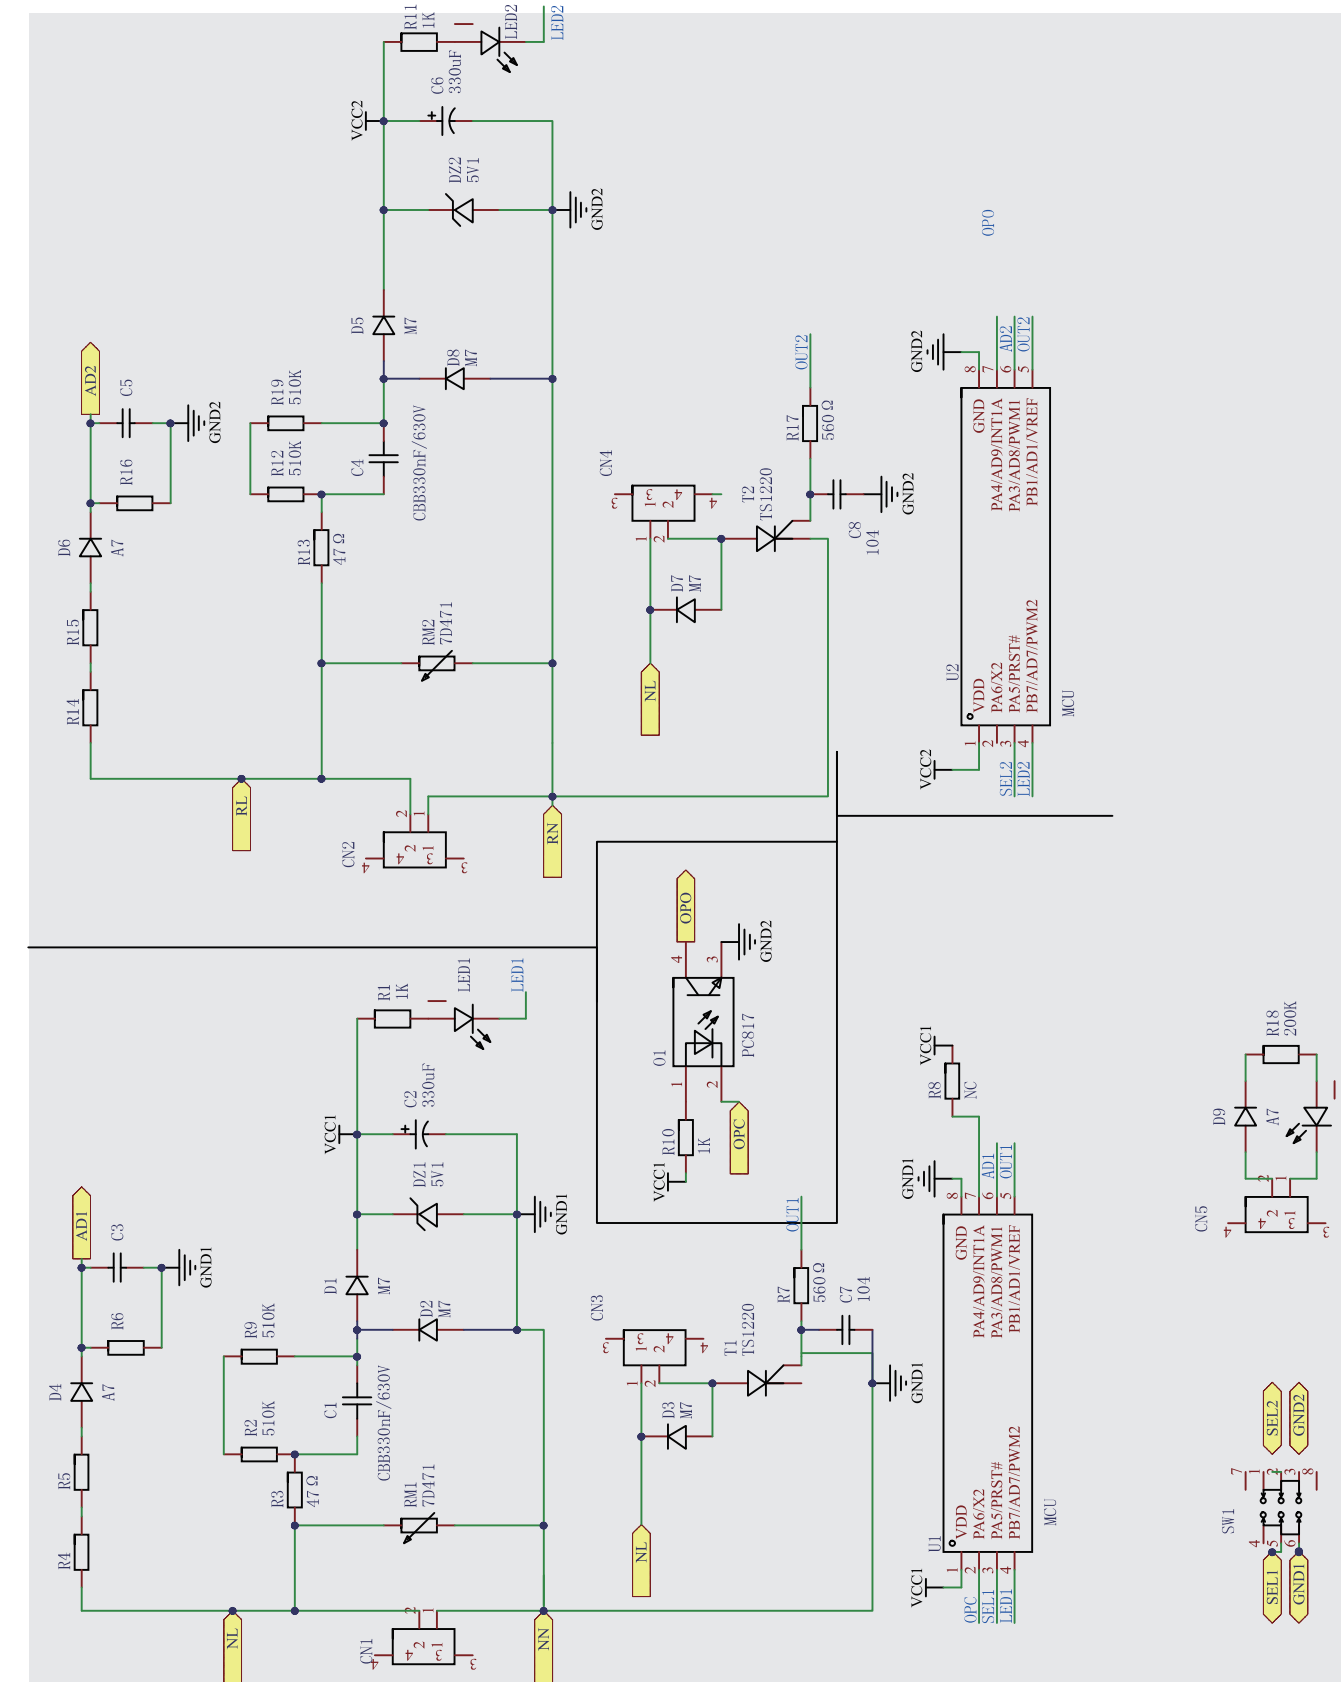

Application scenarios

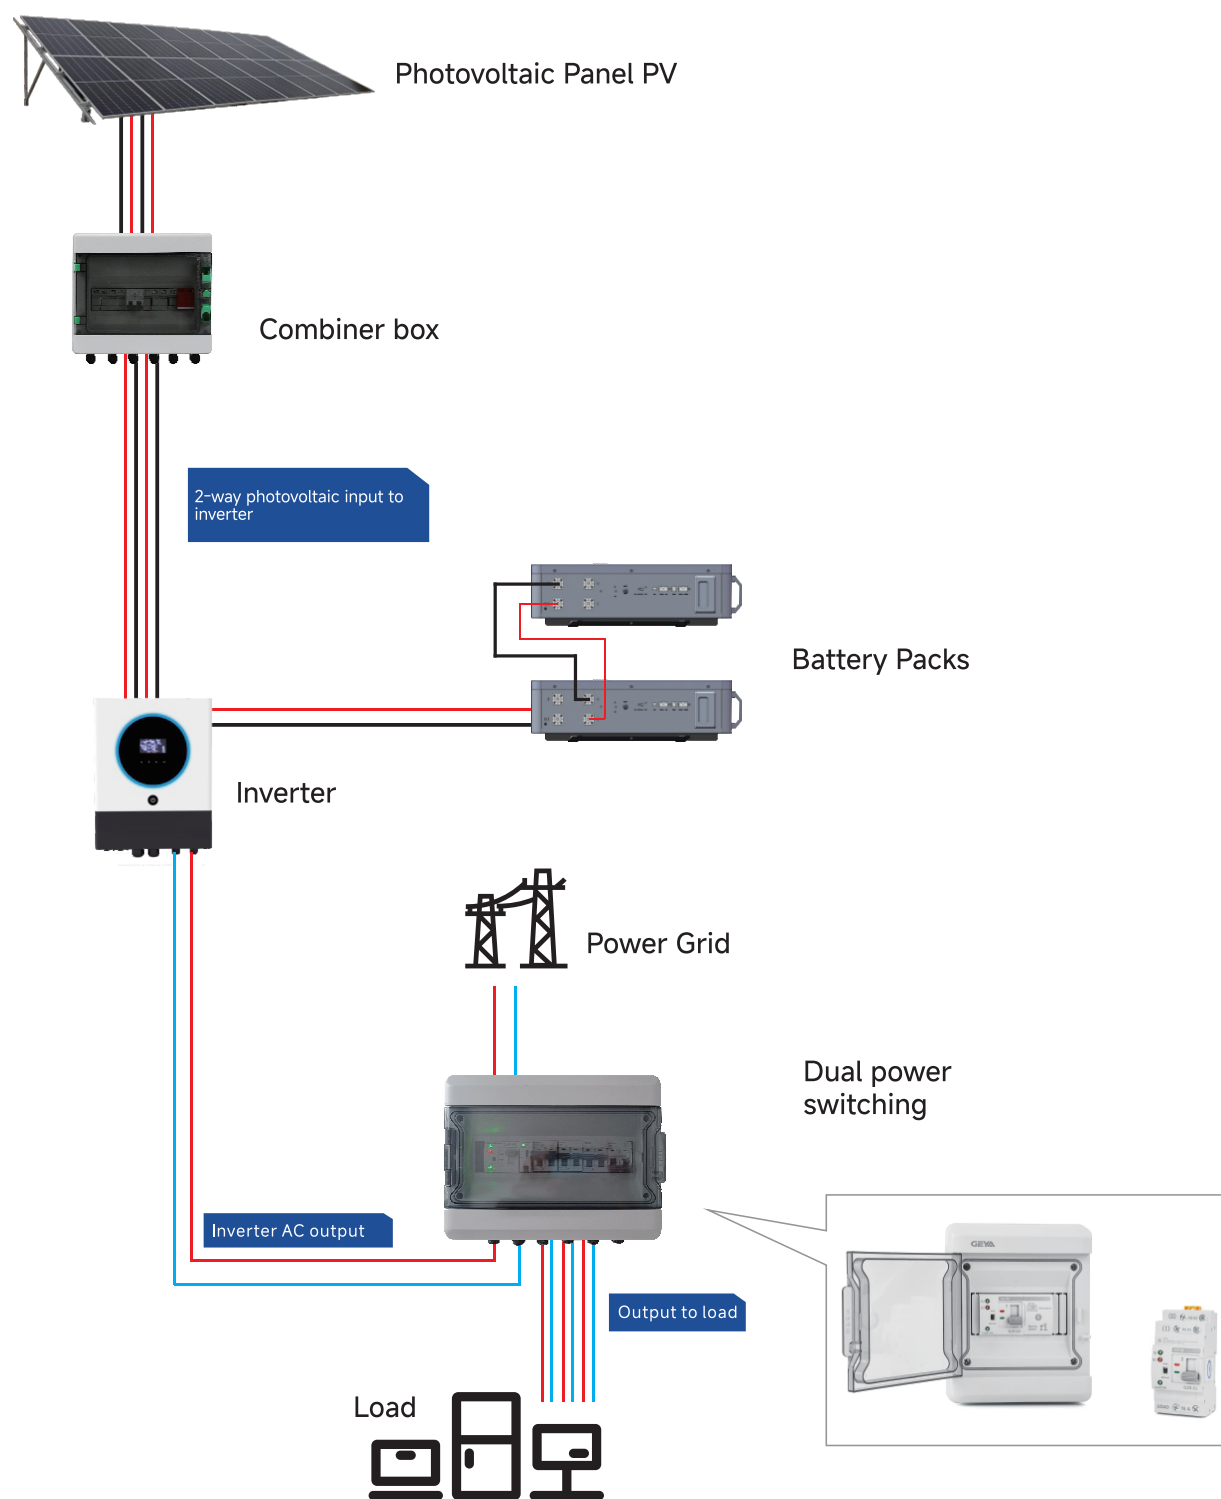

Can be installed inside the distribution box

